



TRANSFER PORT

WATER OUTLET

VALVE

WATER CIRCULATING PUMP

WATER INLET

EXHAUST OUTLET

EXHAUST PORTS

EXPANSION CHAMBER

STARTING CAM

TRANSFER PASSAGE

ENGINE CRANKSHAFT

FORWARD CONE

CLUTCH JOY

MAGNETO

EPICYCLIC GEAR

GEAR CONTROL HANDLE

THROTTLE CONTROL LEVER

CONTROL LOCKING PLUNGER

GEAR CONTROL SHAFT

COUPLING SHAFT

GEAR OPERATING SLEEVE

Yachting World
Copyright 1910